TROUBLESHOOTING:

	Possible Cause	Corrective Action
Bulb will not light	1. Bulb is burned out	1. Replace light bulb
	2. Switch is off	2. Make sure switch is on
	3. Faulty wire connection	3. Check wiring
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounding out	Check wire connections

PRODUCT MAINTENANCE:

1. To clean the outside of the lamp, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the shade and surface of the lamp.

2. To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the inside shade and interior surface of the fixture.

3. Do not use any cleaners with chemicals, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

LIMITED WARRANTY

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.**

INSTRUCTION MANUAL

INTERIOR 2-LIGHT PENDANT
RAZZARI

HOME DEPOT SKU 601-665 | S/O: 435-068 (UPC 773546217453)
CHROME FINISH

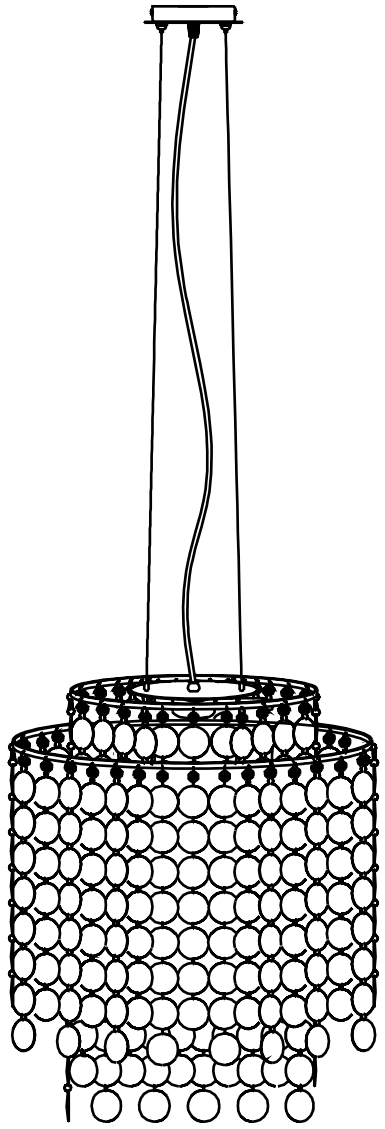

Thank you for purchasing this Hampton Bay interior decorative lighting. This product has been manufactured with the highest standards of safety and quality.

FEATURES:

Refined capiz shell strands radiate a simple elegance to this fixture that complements any décor.

Standard 72” wire 60” cable for open entry-way and cathedral ceiling installations.

QUESTIONS, PROBLEMS, MISSING PARTS:

Before returning to your local Home Depot, please call our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 601-665 or (UPC 773546217453).**

CAUTION:

1. Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

2. CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

3. If you have any non-electrical questions about this fixture, please contact our Customer Service Team at 1-877-527-0313 or visit www.homedepot.com. Please reference your **SKU 601-665 or (UPC 773546217453).**

4. Keep your receipt and these Instructions for Proof of Purchase.

INSTALLATION:

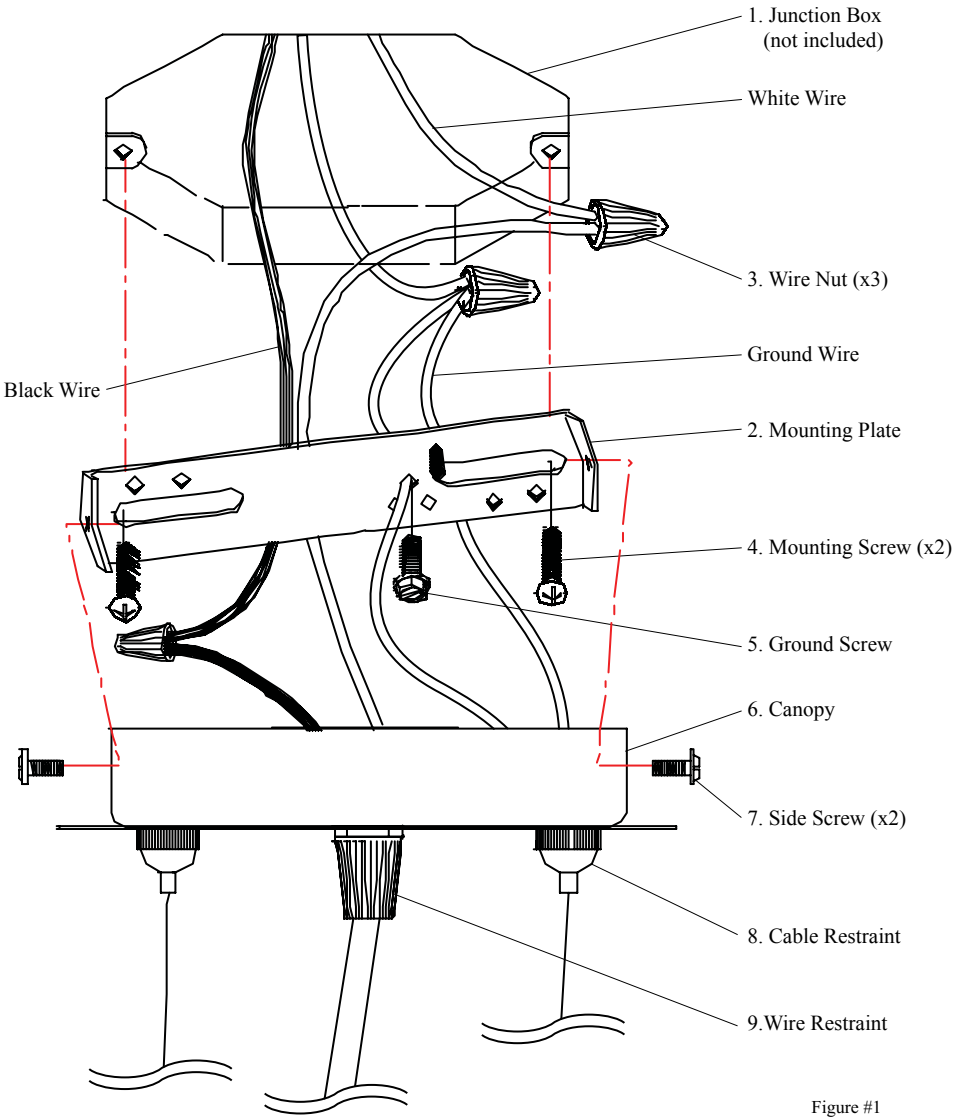

Figure #1

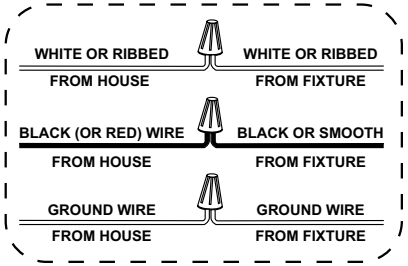

ADDITIONAL PARTS FOR INSTALLATION (included):



2. Mounting Plate

3. Wire Nut (x3)



4. Mounting Screw (x2)



5. Ground Screw



6. Canopy



7. Side Screws (x2)

INSTALLATION INSTRUCTIONS:

1. Turn off power at main fuse box.

2. While depressing cable restraint (8) on pendant canopy (6), push or pull on cable depending if you want to raise or lower your height. Do this adjustment prior to installation.

3. Re-attach the cable stopper (which is located at the end of the suspension cable) at the new height. This is an added safety precaution.

4. Push excess clear cord up into canopy (6), leaving a little slack to form an “S” pattern by unfastening the wire restraint (9) mounted on canopy (6), and then refasten wire restraint (9) once proper wire length is achieved.

5. Install mounting backplate (2) to junction box (1) with 2 screws supplied.

6. Fasten open end of ground wire (bare copper or green wire) to ground wire or ground screw of junction box (1) or ground screw (5) on mounting backplate (3).

7. Connect black wire of power supply to the wire of the chandelier marked in Black (coded at the tip) and connect white wire of power supply to the wire of the chandelier left in clear or marked in White (coded at the tip).

NOTE: All wire connections should be made with wire nuts or marettes (included) and pushed back into junction box (1). See Figure 1.

8. Mount canopy of pendant (6) over mounting backplate (2) and secure with side screws (7) supplied.

TOOLS REQUIRED FOR ASSEMBLY & INSTALLATION (not included):

Safety Goggles

Wire Stripper



Wire Cutters



Flathead Screwdriver



Phillips Screwdriver

Electrical Tape

A19 Bulb 60W Max. (not included)

ADDITIONAL PARTS FOR ASSEMBLY (included):

Strand (A)

Strand (B)

ASSEMBLY INSTRUCTIONS:

1. Carefully unpack the fixture; lay out all parts on a clean surface.

2. Install A19 Bulb 60W max. (not included).

3. Carefully unwrap one package of Capiza shell at a time.

4. Install alternatively the capiz shell strands (A) consisting of 11 and 12 pcs each onto the inner frame (10).

5. Install alternatively the capiz shell strands (B) consisting of 7 and 8 pcs each onto the outer frame (12).

ASSEMBLY: